





VEHICLE POSITIONING WHEEL DOLLIES



Specifications:

- Safe Working Capacity: 680kgs
- Dimension: 400 x 300mm
- Castors: 75mm Dia 2 x standard castors and 2 x castors with locking brakes
- Total capacity is 1360kg for the set of 2
- Gross Weight: 15kg

About the **TradeQuip** brand

The 'TradeQuip' brand of workshop equipment, is designed for use in a demanding workshop environment by professional users. With proven and trusted "Made for the Trade" reliability, 'TradeQuip' branded products offer the very best in performance for an affordable price. All backed by a 1 year trade guarantee across 1,000+ distributors Australia wide.







WARNING

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE



WARNING

The instructions and warnings contained in this manual should be read and understood before using or operating this equipment. Do not allow anyone to use or operate this equipment until they have read this manual and have developed a thorough understanding of how this equipment works. Failure to observe any of the instructions contained in the manual could result in severe personal injury to the user or bystanders, or cause damage to the equipment and property. Keep this manual in a convenient and safe place for future reference.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the TQB Brands Pty Ltd policy of continuous improvement determines the right to make modifications without prior warning.

CONTENT

WARNING	2
CONTENT	
ASSEMBLY, OPERATION, PREVENTITIVE MAINTENANCE	
PARTS LIST	
WARRANTY	6

STANDARD OPERATING PROCEDURE

DO NOT use these jacks unless you have been trained and assessed to a competent level in its sate use and operation, and have been given permission to use them.



Safety glasses must be worn when operating this equipment



Long loose hair must be contained when operating this equipment



Safety footwear must be worn when operating this equipment



Close fitting/protective clothing must be worn when operating this equipment



Rings and jewellery must not be worn when operating this equipment

PRE-OPERATIONAL SAFETY CHECKS

- For your safety, do not modify or alter these vehicle positioning Wheel Dollies.
- DO NOT operate these vehicle positioning Wheel Dollies on inclined surfaces. This these vehicle positioning Wheel Dollies
 must only be used on hard level surfaces.
- DO NOT exceed the vehicle positioning Wheel Dollies rated safe working capacity.
- DO NOT start the vehicle's engine or drive a vehicle while the Wheel Dollies are in use vehicle positioning Wheel Dollies are for manoeuvring vehicles only.
- DO NOT attempt to push vehicle positioning Wheel Dollies over obstacles. These Wheel Dollies are designed to be used on level, smooth surfaces only.
- NO Person should remain in a vehicle that is being moved on these Wheel Dollies.
- Use only as specified by the manufacturer.
- Securely chock wheels remaining on the ground until the vehicle is ready to be manoeuvred.
- When servicing, use only TradeQuip identical replacement parts. Use of any other parts will void the warranty.
- Use the right product for the job. There are certain applications for which the vehicle positioning Wheel Dollies was designed. Do not modify the vehicle positioning Wheel Dollies and do not use the vehicle positioning Wheel Dollies for a purpose for which it was not intended.

INTENDED USE

For easy movement of vehicles that are inoperable due to parts removal or other mechanical problems to free up hoists and jack stands for other work to be performed.

ASSEMBLY, OPERATION, PREVENTITIVE MAINTENANCE

1. FEATURES & MODELS

The *TradeQuip "Made for the Trade"* Vehicle Positioning Wheel Dollies manoeuvre vehicles safely and easily, without touching the chassis! Constructed from high-quality powder-coated steel, they have a Safe Working Capacity of 680kg each. Heavy-duty swivel castor wheels enable the rolling of cars, quad bikes, vans and light trucks into tight areas with ease. Relocating non-running vehicles or shells will never again be a drama! This pair of positioning Wheel Dollies will allow 180° pivoting, add you can add an extra pair to allow for 360° manoeuvrability.

2. ASSEMBLY

Unpacking: after removing the packing material, make sure the product is in perfect condition and that there are no visible damaged parts.

Refer to the Parts List on page 6 for contents

- 1. Insert Brake Castors (2) and Castors (3) through holes in Frame (1), making sure Brake Castors are on same outer side. Fasten using Washers (6), Lock Washers (5) and Nuts (4).
- 2. Once Wheel Dollies are assembled, roll Dollies along surface to verify all connections are secure and Dollies roll freely.

3. BEFORE USE

Prior to each use conduct a visual inspection checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.

- 1. Lubricate the swivels and castors
- 2. Clean all parts and surfaces
- 3. Maintain all operating and warning labels

4. OPERATION

- 1. Chock opposite end wheels to keep vehicle from rolling. Chocks sold separately.
- 2. Place Dolly in position under raised front or rear wheels and lower vehicle slowly onto Dollies.
- 3. To move a vehicle supported by four Dollies: remove wheel chocks, unlock Castors, and use handles to guide vehicle to location.
- 4. Lock castors once vehicle is in location.

5. INSPECTION

- Prior to each use conduct a visual inspection checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.
- These Vehicle Positioning Wheel Dollies shall always be maintained in accordance with the maintenance instructions. No alterations or modifications shall be made.
- Inspections shall be performed in accordance with this owner's manual.
- These Vehicle Positioning Wheel Dollies must be inspected immediately if it is believed to have been subjected to abnormal load or shock.
- Owners and /or operators should be aware that repair of this product may require specialised equipment and knowledge (refer to maintenance section).

6. STORAGE

When not in use, these Vehicle Positioning Wheel Dollies should always be stored in a dry location on a level surface where they will not be exposed to corrosive vapours, abrasive dust, or any other harmful elements.

7. MAINTENANCE

- Keep the lift clean and wipe off any oil or grease. Lubricate all moving parts.
- Before each use check all parts. If any part of the lift is damaged or suspect, remove the lift from service and take necessary action to repair.
- Only use replacement parts that are approved by the manufacturer.
- Regularly clean all surfaces and maintain all labels and warnings.


8. SERVICE & REPAIR

Any Vehicle Positioning Wheel Dolly found damaged in any way, or found to be worn or operates abnormally should be removed from service until repaired by an authorised service agent. Owners and / or operators should be aware that repair of this product may require specialised equipment and knowledge. Only authorised parts, labels and decals shall be used on this equipment. Annual inspection of these Vehicle Positioning Wheel Dollies is recommended and can be made by an authorised repair facility to ensure that your equipment is in optimum condition and that the equipment has the correct decals and safety labels specified by the manufacturer

PARTS LIST

No:	Description	Qty
1	Frame with handle	1
2	Castor Wheel with brake	2
3	Castor Wheel	2

No:	Description	Qty
4	Nut	8
5	Lock Washer	8
6	Washer	8

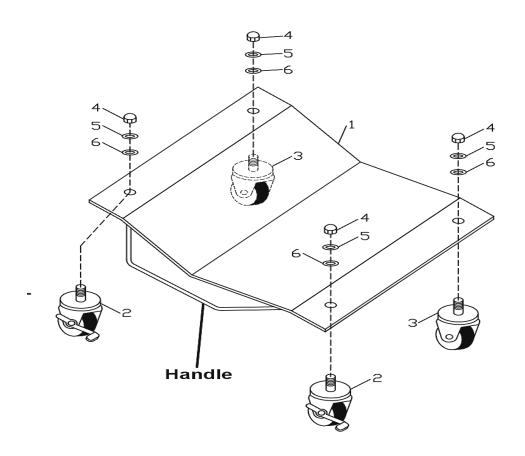

WARRANTY

TradeQuip products have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship for a period of 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase.

Should this piece of equipment develop any fault, please return the complete tool to your nearest authorised warranty repair agent or contact TQB Brands Pty Ltd Warranty team – <u>warranty@tqbbrands.com.au</u>.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accident, or repairs attempted or made by any personnel other than the authorised TQB Brands Pty Ltd repair agent.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your TQB Brands Pty Ltd guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the 12 month period.

Consumer Guarantee

Our goods come with a guarantee that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



All images and illustrations shown are for reference purposes only. All information, specifications and illustrations in this manual are based on the latest information available at the time of publication and are subject to change without notice. The information in this manual is periodically revised to ensure the latest information is included. Download the latest version of this manual and other related technical documentation from www.tqbbrands.com.au.